




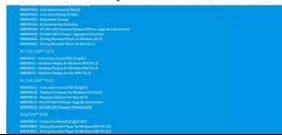




NEXTBASE NBDVR112 Upgrade Instructions

<p>1. Download the latest version of the NEXTBASE NBDVR112 Firmware from the Downloads Section of the NEXTBASE Website.</p>	
<p>2. Copy the Firmware Update File (FW96220A.bin) onto a blank, formatted MicroSD card.</p>	
<p>3. With power turned off, insert the MicroSD Card containing the Firmware Update File (FW96220A.bin) into the slot in the side of the camera.</p>	
<p>4. Connect the power cable to the USB connection on the side of the camera.</p>	
<p>5. The LED in the bottom left corner of the camera will start to flash indicating that the Firmware update is being installed.</p>	
<p>6. Once the Firmware update has been installed the camera will restart.</p>	
<p>7. To check the update has been successful, Press the Menu Button twice to display the Setup Menu.</p>	
<p>8. Press the down arrow to scroll down to the second Setup Menu screen and then highlight System Info, then press the OK button select</p>	
<p>9. The Screen will display the Firmware Version installed on the camera.</p>	