


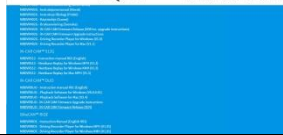







# Nextbase NBDVR412GW Upgrade Instructions

<p>1. Download the latest version of the NEXTBASE NBDVR412GW Firmware from the Downloads Section of the NEXTBASE Website.</p>	
<p>2. The Firmware Update will download as a single file labelled FW96660A.bin</p>	
<p>3. Copy the Firmware Update File onto a blank, formatted MicroSD card. Please note, the file must not be changed or it will not be detected by your dash cam.</p>	
<p>4. With power turned off, insert the MicroSD Card containing the Firmware Update Files into the slot in the side of the camera.</p>	
<p>5. Connect the power cable to the USB connection on the side of the mount.</p>	
<p>6. The LED in the bottom left corner of the camera will start to flash indicating that the Firmware is being updated</p>	
<p>7. Once the Firmware update has been installed the dash cam will restart and display the First Time Use Setup Menu. Use the Arrow Buttons to choose your required settings and the OK button to Confirm</p>	
<p>8. To check the update has been successful, Press the Menu Button twice to display the Setup Menu.</p>	
<p>9. Press the down arrow to scroll down to the third Setup Menu screen and then highlight System Info, then press the OK button to select</p>	

<p>10. Ensure that the Version option is highlighted and then press the Ok button to select</p>	 A screenshot of a camera's 'System Info' menu. The 'Version' option is highlighted with a red bar. Below it, 'WiFi Info' is visible. At the bottom, there are 'MENU Back' and 'OK Enter' buttons.	
<p>11. The Screen will display the Firmware Version installed on the camera.</p>	 A screenshot of the camera's 'System Info' screen after selecting 'Version'. It displays the firmware version 'NBDVR412GW-R6.2' and a 'Check for updates' link to 'www.nextbase.co.uk'. The 'MENU Back' and 'OK Enter' buttons are at the bottom.	