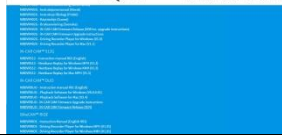 

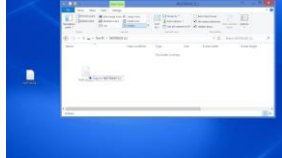 








Nextbase NBDVR512GW Upgrade Instructions

<p>1. Download the latest version of the NEXTBASE NBDVR512GW Firmware from the Downloads Section of the NEXTBASE Website.</p>	
<p>2. The Firmware Update will download as a single file labelled FW512GWA.bin</p>	
<p>3. Copy the Firmware Update File onto a blank, formatted MicroSD card.</p>	
<p>4. With power turned off, insert the MicroSD Card containing the Firmware Update Files into the slot in the side of the dash cam.</p>	
<p>5. Connect the power cable to the USB connection on the top of the dash cam.</p>	
<p>6. The dash cam will switch on and will display a blue screen showing that the Firmware is updating</p>	
<p>7. Once the Firmware update has been installed the dash cam will restart and display the First Time Use Setup Menu. Use the Arrow Buttons to choose your required settings and the OK button to Confirm</p>	
<p>8. To check the update has been successful, Press the Menu Button twice to display the Setup Menu.</p>	
<p>9. Press the down arrow to scroll down to the fourth Setup Menu screen and then highlight System Info, then press the OK button to select</p>	

<p>10. Ensure that the Version option is highlighted and then press the Ok button to select</p>	 A screenshot of a handheld device's 'System Info' menu. The 'Version' option is highlighted with a red bar. Below it, 'WiFi Info' is visible. At the bottom, there are buttons for 'MENU Back' and 'OK Enter'. The device is connected to a power source.	
<p>11. The Screen will display the Firmware Version installed on the camera.</p>	 A screenshot of the same handheld device's 'System Info' menu. The 'Version' option is now selected, and the screen displays 'M3CV1802W-A-1008.8'. Below this, it says 'Check for updates' and provides the website 'www.meritusa.co.uk'. At the bottom, there are buttons for 'MENU Back' and 'OK Enter'.	