

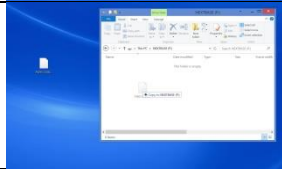 


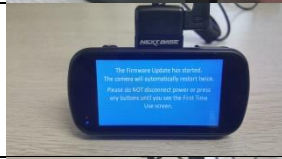 

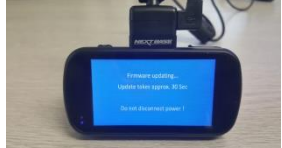 


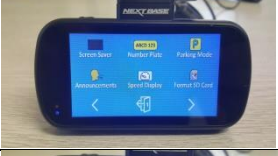 



Nextbase NBDVR612GW Upgrade Instructions

Please note, the Nextbase NBDVR612GW can be updated pressing the 'Update Dash Cam' button in the Nextbase Replay 3 playback software and then following the on screen prompts.

The instructions below explain how to manually update your Nextbase NBDVR612GW

<p>1. Download the latest version of the NEXTBASE NBDVR612GW Firmware from the Downloads Section of the NEXTBASE Website.</p>	
<p>2. The Firmware Update will download as a single file labelled FW612GWA.bin</p>	
<p>3. Copy the Firmware Update File onto a blank, formatted MicroSD card.</p>	
<p>4. With power turned off, insert the MicroSD Card containing the Firmware Update Files into the slot in the side of the dash cam.</p>	
<p>5. Connect the power cable to the USB connection on the side of the dash cam mount.</p>	
<p>6. The dash cam will switch on and will display a blue screen showing that the Firmware is updating</p>	
<p>7. After a few seconds the camera screen will go blank, do not press the Power Button or disconnect the power at this stage, the dash cam is still updating</p>	
<p>8. After approximately 90 seconds the dash cam will reboot and display a second blue screen confirming that the firmware update is still in progress</p>	

<p>9. Once the Firmware update has been installed the dash cam will restart and display the First Time Use Setup Menu. Use the Arrow Buttons to choose your required settings and the OK button to Confirm</p>	
<p>10. To check the update has been successful, Touch the screen and the pop up menu will appear</p>	
<p>11. Tap the Settings button and the Settings Menu 1 will appear</p>	
<p>12. Use the Arrow Buttons at the bottom of the screen to navigate to Settings Screen 5</p>	
<p>13. Tap the System Info button and the Version number will be displayed on screen</p>	