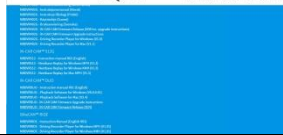

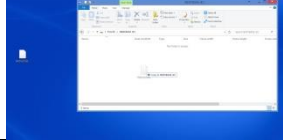









Nextbase NBDVRDHDGW DUO HD Upgrade Instructions

<p>1. Download the latest version of the NEXTBASE NBDVRDHDGW DUO HD Firmware from the Downloads Section of the NEXTBASE Website.</p>	
<p>2. The Firmware Update will download as a single file labelled FWDHDGWA.BRN</p>	
<p>3. Copy the Firmware Update File onto a blank, formatted MicroSD card.</p>	
<p>4. With power turned off, insert the MicroSD Card containing the Firmware Update Files into the slot in the side of the dash cam.</p>	
<p>5. Connect the power cable to the USB connection on the top of the dash cam.</p>	
<p>6. The dash cam will switch on and will display a screen showing that the Firmware is updating</p>	
<p>7. Once the Firmware update has been installed the dash cam will restart and display the First Time Use Setup Menu. Use the Arrow Buttons to choose your required settings and the OK button to Confirm</p>	
<p>8. To check the update has been successful, Press the Menu Button twice to display the Setup Menu.</p>	
<p>9. Press the down arrow to scroll down to the fourth Setup Menu screen and then highlight System Info, then press the OK button to select</p>	

<p>10. Ensure that the Version option is highlighted and then press the Ok button to select</p>		
<p>11. The Screen will display the Firmware Version installed on the camera.</p>	