

Setting up MyNextbase Connect, Alexa, and the Alexa Skill on a Nextbase 422GW or 522GW Dash Cam



Introduction



The following document contains a pictorial run-through of how to set up MyNextbase Connect and Alexa with your **422GW** or **522GW** Nextbase Dash Cam, as well as how to successfully enable the Alexa Skill.

Before starting, please return the Dash Cam to its factory settings and uninstall any previously downloaded Alexa or MyNextbase Connect apps.

To return the Dash Cam to its factory settings:

Turn on the Dash Cam, stop it recording, go into 'Settings- Setup- Keep User Settings- Off'.
Go back into 'Settings- Setup- Default Settings' then return the Dash Cam to the default settings.

Please re-download the latest version of the MyNextbase App and the Alexa app.

If you have any issues during this set-up, please contact Nextbase at support@nextbase.com , quoting the step number and details that the issue occurred on, and the Support Team will be able to help resolve the issue.

If you get to the end of this setup, but cannot hear Alexa reply, please make sure the Media volume is fully turned up on your mobile device.

For some devices, you may need to go into the 'Advanced Sound Settings' in your mobile's settings and change the 'Separate App Sounds' setting.

Finally, please be aware that the exact order of the setup could differ with different mobile devices in comparison to the order presented here.

If you have individual difficulties with your mobile device which prevents successful setup, please contact us.



Please plug the Dash Cam into a power source Turn the Dash Cam ON and stop it recording by pressing the red circle.



2

Press the Settings symbol in the top left corner of the screen.





3

4

This will present a menu. Click 'Connect Apps'.



Click 'MyNextbase'.





Click 'Setup Phone'.

5

6

This will present the screen shown here. Please leave the Dash Cam on this screen during the next steps as this is essential for connection.





7

8

Open the MyNextbase Connect app on your mobile device. Click 'Connect Dash Cam'

The app will then scan for the Dash Cam. Please click on your Dash Cam when it appears

on the screen.

If you need to identify your camera by the Serial number, the Serial number can be located on the underside of your Dash Cam, printed on a sticker.





9

10

Your mobile device will then make a Bluetooth request. Depending on what type/make of device you have, this screen may pop-up, or you may be taken to the Bluetooth Settings on your device. Please wait for the pop-ups to appear and 'OK' them.

The MyNextbase Connect app will then check for any available Firmware updates for your Dash Cam. If a newer Firmware is available for your Dash Cam, it will offer you the option to update it. If your Dash Cam is up to date, it will inform you so.







Open the Alexa App on your Mobile Phone. Go through the log in process until you get to the Alexa Home Screen. Do not connect your Dash Cam yet.



Once you are fully connected, please go back into the MyNextbase Connect app. Click 'Set Up Now' on the Amazon Alexa ribbon.





13

14

This will open a new page. Please click 'Start Setup'.

The Amazon Alexa app will then scan for your Dash Cam. Your Dash Cam should also be displaying an Alexa connect screen automatically. On your mobile device Alexa app, please select your Dash Cam.



Don't see your device?

VAILABLE DEVICES

Nextbase522GW-0dbb

Nextbase422GW-e1c2

Nextbase422GW-c90c

8--

CANCEL SETUP

1	
	5

16

The Alexa app will then ask you if you want to set up Alexa on the Dash Cam. Please click 'Continue'.







17

18

You should now be set up and paired with Alexa.

Go back into the MyNextbase Connect App. On the home page, please click: Amazon Alexa- 'Learn More'.





(19)

20

Please click 'Enable the Skill'.

Press 'Continue'.

Alexa





21

This will open the Alexa app. Press 'Enable to Use'.

The App will then ask for permission to use your name. Tick the box and click 'Save Settings'.



SAVE SETTINGS





A web pop up will then appear and ask you to log in to your Amazon account. Please use the same one your previously used, and then click 'Sign-in'.



Once logged in, a confirmation page will load confirming that the Skill has been enabled.





When you then go back to the MyNextbase Connect app, the app will confirm that you have activated the skill.



Now you will be able to fully use Alexa. If you would like a list of usable commands for Dash Cam control, please click on 'Available Now'.









This will bring up a full list of commands to control your Dash Cam, hands free.

12:25 O		N 语 示 II 58% -		
< MyNextba	ase Skill			
What can I say to my Dash Cam? Here's what you can say to control your Nextbase Dash Cam				
Start Recording "Alexa, Ask My Dash C	am to stop re	cording!″		
Stop Recording "Alexa, Ask My Dash C	am to start re	cording!"		
Take Photo "Alexa, Ask My Dash C	am to take a j	photo!"		
Protect a file "Alexa, Ask My Dash C	am to protect	this file!"		
Screen Saver On "Alexa, Ask My Dash C	am to turn sci	reen saver on!"		
Screen Saver Off "Alexa, Ask My Dash C	am to turn sci	reen saver off!"		
PiP On (show rear cam) "Alexa, Ask My Dash C	am to show re	ear cam!"		
PiP Off (show front can "Alexa, Ask My Dash C	n) am to show fr	ont cam!"		
Speed Display On (show speed) "Alexa, Ask My Dash Cam to show speed!"				
Speed Display Off (hide speed) "Alexa, Ask My Dash Cam to hide speed!"				
Enable Audio (microphone on) "Alexa, Ask My Dash Cam to enable audio!"				
Disable Audio (microph "Alexa, Ask My Dash C	one off) am to disable	audio!"		
Increase Video Evnosu				
III	0	<		

Notes:

If you get to the end of this setup, but cannot hear Alexa reply, please make sure the Media volume is fully turned up on your mobile device.

For some devices, you may need to go into the 'Advanced Sound Settings' in your mobile's settings and change the 'Separate App Sounds' setting.









www.nextbase.com

NBMNCALEXA-R1